

Мануал по настройке роутера D-Link DIR-615.



Оглавление.


1. Рекомендации, Авторизация.....	стр.3
2. Смена заводского пароля.....	стр. 4
3. Настройка Wi-Fi на роутере.....	стр.5-6
4. Настройка роутера в режиме «бридж».....	стр. 7
5. Настройка в режиме роутера.....	стр. 8-14
6. Настройка PPPoE при автоматическом получении локального IP адреса (DHCP).....	стр. 9
7. Настройка PPPoE при статическом локальном IP адресе.....	стр. 10
8. Настройка PPTP (VPN) при автоматическом получении локального IP адреса (DHCP).....	стр. 11
9. Настройка PPTP (VPN) при статическом локальном IP адресе.....	стр. 12
10. NAT при автоматическом получении IP адреса (DHCP).....	стр. 13
11. Проверка статуса подключения.....	стр. 14
12. Сохранение/восстановление настроек.....	стр. 15

Рекомендации.

1. Для помощи в удаленной настройке рекомендуется к использованию он-лайн эмулятор - http://support.dlink.com/emulators/dir615_revC/310NA/login.htm
2. По умолчанию, Логин Admin, пароль пустой.
3. Курьеры-настройщики должны в настройках изменять пароль на Серийный номер, указанный на коробке (S/N). При перенастройке рекомендуется также использовать в качестве пароля на роутер и wi-fi S/N (серийный номер).
4. Сброс настроек роутера производится путем нажатия и удержания кнопки Reset на задней панели роутера в течении 10 секунд.

Авторизация.

Для того, что бы попасть в веб-интерфейс роутера, необходимо открыть ваш Интернет браузер и в строке адреса набрать <http://192.168.0.1> , User Name **admin** , Password – **оставить пустым** (при условии, что роутер имеет заводские настройки, и его IP не менялся).

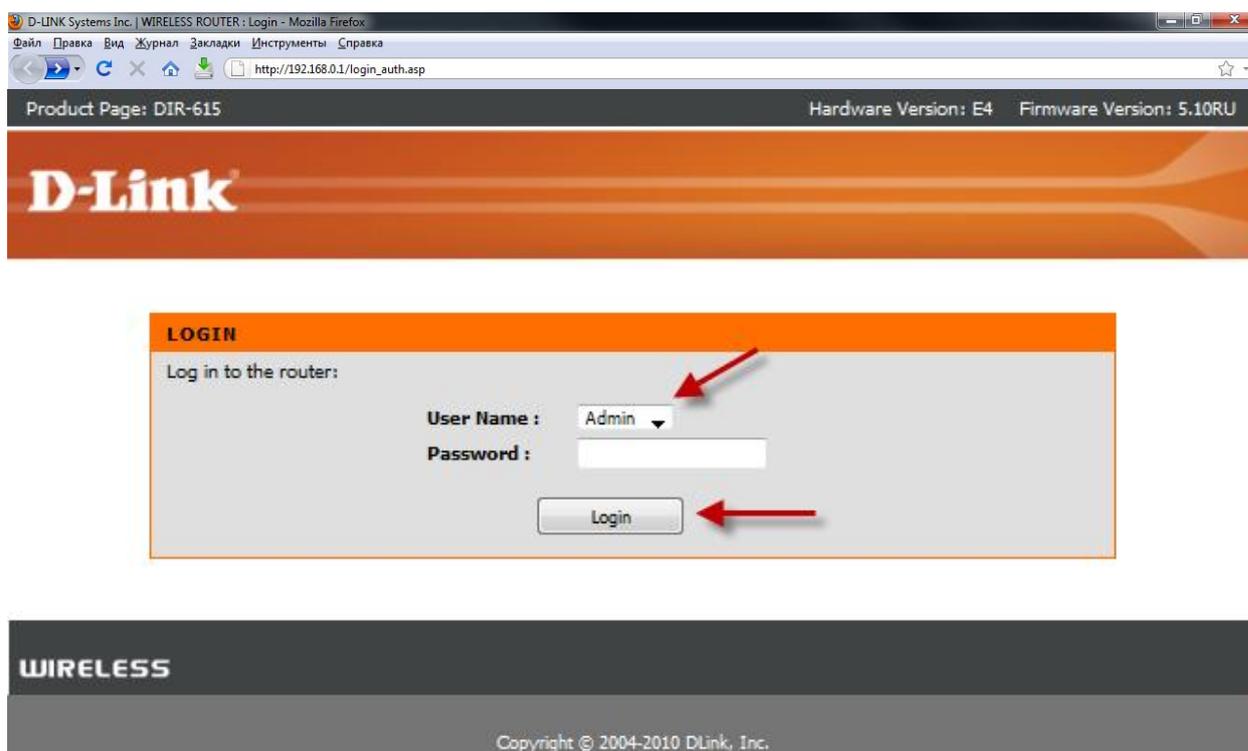

Смена заводского пароля.

В целях безопасности рекомендуется сменить заводской пароль.

По умолчанию: Логин admin, пароль пустой.

Курьеры-настройщики должны в настройках изменять пароль на Серийный номер, указанный на коробке (S/N). При перенастройке рекомендуется также использовать в качестве пароля на роутер и wi-fi S/N (серийный номер).

В интерфейсе роутера необходимо зайти во вкладку **Инструменты (TOOLS)**, меню **Администрирование (ADMIN)**.

В поле **Password** введите новый пароль.

В поле **Verify Password** повторите новый пароль.

Аналогичную операцию повторите с паролем пользователя.

The screenshot shows the D-Link DIR-615 web interface. At the top, it displays 'Product Page: DIR-615', 'Hardware Version: E4', and 'Firmware Version: 5.10RU'. The main navigation bar includes 'DIR-615', 'SETUP', 'ADVANCED', 'TOOLS' (highlighted with a red circle), 'STATUS', and 'SUPPORT'. On the left sidebar, 'ADMIN' is also highlighted with a red circle. The main content area is titled 'ADMINISTRATOR SETTINGS' and contains the following text: 'The 'admin' and 'user' accounts can access the management interface. The admin has read/write access and can change passwords, while the user has read-only access. By default there is no password configured. It is highly recommended that you create a password to keep your router secure.' Below this text are two buttons: 'Save Settings' and 'Don't Save Settings'. The 'ADMIN PASSWORD' section has the instruction 'Please enter the same password into both boxes, for confirmation.' and two input fields labeled 'Password' and 'Verify Password', both containing the text 'Укажите S/N устройства'. The 'USER PASSWORD' section has the same instruction and two input fields, also containing 'Укажите S/N устройства'. The 'SYSTEM NAME' section shows 'Gateway Name' set to 'DIR-615'. On the right side, there is a 'Helpful Hints...' section with several paragraphs of text.

Затем нажмите кнопку **Save Settings**.

После этого, роутер предложит повторно зайти в его настройки.

Настройка Wi-Fi на роутере.

В интерфейсе роутера необходимо выбирать вкладку «*SETUP*», слева - «*Wireless Settings*». Здесь нажимаем кнопку «*Manual Wireless Connection Setup*».

Product Page: DIR-615 Hardware Version: E4 Firmware Version: 5.10RU

D-Link

DIR-615 // **SETUP** ADVANCED TOOLS STATUS SUPPORT

INTERNET
WIRELESS SETTINGS
NETWORK SETTINGS

WIRELESS SETTINGS

The following Web-based wizards are designed to assist you in your wireless network setup and wireless device connection.

Before launching these wizards, please make sure you have followed all steps outlined in the Quick Installation Guide included in the package.

WIRELESS NETWORK SETUP WIZARD

This wizard is designed to assist you in your wireless network setup. It will guide you through step-by-step instructions on how to set up your wireless network and how to make it secure.

Wireless Network Setup Wizard

Note: Some changes made using this Setup Wizard may require you to change some settings on your wireless client adapters so they can still connect to the D-Link Router.

ADD WIRELESS DEVICE WITH WPS (WI-FI PROTECTED SETUP) WIZARD

This wizard is designed to assist you in connecting your wireless device to your router. It will guide you through step-by-step instructions on how to get your wireless device connected. Click the button below to begin.

Add Wireless Device with WPS

MANUAL WIRELESS NETWORK SETUP

If your wireless network is already set up with Wi-Fi Protected Setup, manual configuration of the wireless network will destroy the existing wireless network. If you would like to configure the wireless settings of your new D-Link Systems Router manually, then click on the Manual Wireless Network Setup button below.

Manual Wireless Network Setup

Helpful Hints...
If you are new to wireless networking and have never configured a wireless router before, click on **Wireless Network Setup Wizard** and the router will guide you through a few simple steps to get your wireless network up and running.
If you consider yourself an advanced user and have configured a wireless router before, click **Manual Wireless Network Setup** to input all the settings manually.
More...

Далее

Выставляем параметры:

1. В разделе «**WI-FI PROTECTED SETUP**» с пункта Enable галочку лучше снять, поскольку не все беспроводные адаптеры поддерживают технологию Wi-Fi Protected Setup."
2. Ставим галочку «**Enable Wireless**»; «**Always**»
3. В графе «**Wireless Network Name**» пишем название для беспроводной сети.
4. 802.11 Mode – **Mixed 802.11n, 802.11n and 802.11b**.
5. **Security Mode: WPA-Personal**;
6. **WPA Mode: WPA-Only**;
7. **Cipher Type: AES**;
8. **Pre-Shared Key**: сюда вводим пароль для доступа в беспроводную сеть. В качестве пароля используйте **Серийный номер**, указанный на коробке (S/N) . После того, как все параметры введены, нажимаем кнопку «**Save Settings**». На этом настройка Wi-Fi на маршрутизаторе D-Link DIR-615 закончена.

The screenshot shows the web interface of a D-Link DIR-615 router. The top navigation bar includes 'DIR-615', 'SETUP', 'ADVANCED', 'TOOLS', 'STATUS', and 'SUPPORT'. The left sidebar has 'INTERNET', 'WIRELESS SETTINGS', and 'NETWORK SETTINGS'. The main content area is titled 'WIRELESS' and contains the following sections:

- WIRELESS**: A note about configuring wireless settings and two buttons: 'Save Settings' and 'Don't Save Settings'.
- WI-FI PROTECTED SETUP (ALSO CALLED WCN 2.0 IN WINDOW VISTA)**: An 'Enable' checkbox (pointed to by a red arrow), 'Current PIN' field, 'Generate New PIN', 'Reset PIN to Default', and 'Reset to Unconfigured' buttons.
- WIRELESS NETWORK SETTINGS**: 'Enable Wireless' checkbox and 'Always' dropdown (pointed to by a red arrow), 'Add New' button, 'Wireless Network Name' field (value: 'dlink'), '802.11 Mode' dropdown (value: 'Mixed 802.11n, 802.11g and 802.11b', pointed to by a red arrow), 'Enable Auto Channel Scan' checkbox (pointed to by a red arrow), 'Wireless Channel' dropdown (value: '2.437 GHz - CH 6'), 'Channel Width' dropdown (value: 'Auto 20/40 MHz', pointed to by a red arrow), and 'Visibility Status' radio buttons (Visible selected).
- WIRELESS SECURITY MODE**: 'Security Mode' dropdown (value: 'WPA-Personal', pointed to by a red arrow).
- WPA**: 'WPA Mode' dropdown (value: 'WPA Only', pointed to by a red arrow), 'Cipher Type' dropdown (value: 'AES', pointed to by a red arrow), and 'Group Key Update Interval' field (value: '3600 seconds').
- PRE-SHARED KEY**: 'Pre-Shared Key' field (value: 'Укажите S/N с коробки', pointed to by a red arrow).

On the right side, there is a 'Helpful Hints...' section with text about changing the Wireless Network Name, enabling Auto Channel Scan, and enabling Hidden Mode. A 'More...' link is at the bottom of this section.

Настройка подключения к Интернет.

Настройка в режиме «Bridge Mode».

1. Смените пароль на роутер.
2. Настройте Wi-Fi на роутере.
3. Вкладка **SETUP**, меню **Network Setting**.
4. Выставьте **Wan Port Mode** – Bridge Mode.
5. Далее настройки подключения к Интернет необходимо **производить на PC** (мануалы по настройке подключения к Интернет находятся на странице <http://help.netbynet.ru/>).

После сохранения настроек управление роутером будет доступно по IP, указанному в поле **Router IP Address** адресу (соответственно, на PC потребуется установить ручную IP 192.168.0.2, маска 255.255.255.0, шлюз 192.168.0.50, в данном случае).

D-Link

DIR-615 // **SETUP** ADVANCED TOOLS STATUS SUPPORT

INTERNET
WIRELESS SETTINGS
NETWORK SETTINGS

NETWORK SETTINGS

Use this section to configure the internal network settings of your router and also to configure the built-in DHCP Server to assign IP addresses to the computers on your network. The IP Address that is configured here is the IP Address that you use to access the Web-based management interface. If you change the IP Address here, you may need to adjust your PC's network settings to access the network again.

Save Settings Don't Save Settings

WAN PORT MODE

Select AP Mode if the device is connected to a local network downstream from another router.

WAN Port Mode: Router Mode Bridge Mode

ROUTER SETTINGS

Use this section to configure the internal network settings of your router. The IP Address that is configured here is the IP Address that you use to access the Web-based management interface. If you change the IP Address here, you may need to adjust your PC's network settings to access the network again.

Router IP Address : 192.168.0.50
Subnet Mask : 255.255.255.0
Device Name : dlinkrouter

Helpful Hints...

If you already have a DHCP server on your network or are using static IP addresses on all the devices on your network, uncheck **Enable DHCP Server** to disable this feature.

If you have devices on your network that should always have fixed IP addresses, add a **DHCP Reservation** for each such device.

More...

Настройка подключения к Интернет в режиме роутера.

Нажимаем кнопку **Manual Internet Connection Setup**

Product Page: DIR-615 Hardware Version: E4 Firmware Version: 5.10RU

D-Link

DIR-615 // **SETUP** ADVANCED TOOLS STATUS SUPPORT

INTERNET WIRELESS SETTINGS NETWORK SETTINGS

INTERNET CONNECTION

There are two ways to set up your Internet connection: you can use the Web-based Internet Connection Setup Wizard, or you can manually configure the connection.

INTERNET CONNECTION SETUP WIZARD

If you would like to utilize our easy to use Web-based Wizards to assist you in connecting your new D-Link Systems Router to the Internet, click on the button below.

[Internet Connection Setup Wizard](#)

Note: Before launching these wizards, please make sure you have followed all steps outlined in the Quick Installation Guide included in the package.

MANUAL INTERNET CONNECTION OPTIONS

If you would like to configure the Internet settings of your new D-Link Systems Router manually, then click on the button below.

[Manual Internet Connection Setup](#)

Helpful Hints...

If you are new to networking and have never configured a router before, click on **Internet Connection Setup Wizard** and the router will guide you through a few simple steps to get your network up and running.

If you consider yourself an advanced user and have configured a router before, click **Manual Internet Connection Setup** to input all the settings manually.

[More...](#)

WIRELESS

Настройка в режиме роутера.

Настройка PPPoE при автоматическом получении локального IP адреса (DHCP).

1. My Internet Connection is: **Russian PPPoE (Dual Access)**
2. **User Name:** Ваш логин из договора
3. **Password:** Ваш пароль из договора
4. **Verify Password:** повтор пароля
5. Нажимаем кнопку **Clone MAC Address**
6. **Connect mode select** – режим установки соединения "**Always on**" для постоянного подключения (рекомендуется).
7. **MTU** – 1472.
7. Сохраняем настройки кнопкой **Save Settings** и ждем пока роутер перезагрузится.

DIR-615	SETUP	ADVANCED	TOOLS	STATUS	SUPPORT
INTERNET	WAN				Helpful Hints... When configuring the router to access the Internet, be sure to choose the correct Internet Connection Type from the drop down menu. If you are unsure of which option to choose, contact your Internet Service Provider (ISP) . If you are having trouble accessing the Internet through the router, double check any settings you have entered on this page and verify them with your ISP if needed. More...
WIRELESS SETTINGS	Use this section to configure your Internet Connection type. There are several connection types to choose from: Static IP, DHCP, PPPoE, PPTP and L2TP. If you are unsure of your connection method, please contact your Internet Service Provider. Note: If using the PPPoE option, you will need to remove or disable any PPPoE client software on your computers. <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/>				
NETWORK SETTINGS	INTERNET CONNECTION TYPE Choose the mode to be used by the router to connect to the Internet. My Internet Connection is : <input type="text" value="Russia PPPoE (Dual Access)"/>				
	RUSSIA PPPOE (DUAL ACCESS) : Enter the information provided by your Internet Service Provider (ISP). Address Mode : <input checked="" type="radio"/> Dynamic IP <input type="radio"/> Static IP IP Address : <input type="text" value="0.0.0.0"/> User Name : <input type="text" value="Логин на Интернет"/> Password : <input type="text" value="Пароль на Интернет"/> Verify Password : <input type="text" value="Пароль на Интернет"/> Service Name : <input type="text"/> (optional) Reconnect Mode : <input checked="" type="radio"/> Always on <input type="radio"/> On demand <input type="radio"/> Manual Maximum Idle Time : <input type="text" value="5"/> (minutes, 0=infinite) MTU : <input type="text" value="1472"/> (bytes)MTU default = 1492 MAC Address : <input type="text" value="48:5B:39:5F:0E:CA"/> <input type="button" value="Clone Your PC's MAC Address"/>				
	WAN PHYSICAL SETTING : Address Mode : <input checked="" type="radio"/> Dynamic IP <input type="radio"/> Static IP IP Address : <input type="text" value="0.0.0.0"/> Subnet Mask : <input type="text" value="0.0.0.0"/> Gateway : <input type="text" value="0.0.0.0"/> Primary DNS Address : <input type="text" value="0.0.0.0"/> (optional) Secondary DNS Address : <input type="text" value="0.0.0.0"/> (optional)				

Настройка PPPoE при статическом локальном IP адресе.

1. My Internet Connection is: **Russian PPPoE (Dual Access)**
2. **User Name:** Ваш логин из договора
3. **Password:** Ваш пароль из договора
4. **Verify Password:** повтор пароля
5. Нажимаем кнопку **Clone MAC Address**
6. **Connect mode select** – режим установки соединения "**Always**" для постоянного подключения (рекомендуется).
7. **MTU** – 1472.
8. Выбираете пункт **Static IP** (значения **Вы можете уточнить в тех. поддержке провайдера по телефону 980-24-00, круглосуточно**). Введите:

1. **IP Address** - IP Address выданный вам провайдером.
 2. **Subnet Mask** – маска подсети.
 3. **Gateway** – шлюз.
 4. **Primary DNS Address** – предпочитаемый DNS Server провайдера (212.1.224.6).
 5. **Secondary DNS Address** – альтернативный DNS server провайдера (212.1.244.6).
- Сохраняете настройки нажатием кнопки **Save Settings**.

The screenshot shows the configuration page for the DIR-615 router. The top navigation bar includes 'DIR-615', 'SETUP', 'ADVANCED', 'TOOLS', 'STATUS', and 'SUPPORT'. The left sidebar lists 'INTERNET', 'WIRELESS SETTINGS', and 'NETWORK SETTINGS'. The main content area is titled 'WAN' and contains the following sections:

- WAN:** Introduction text and a 'Note' about PPPoE client software. Buttons for 'Save Settings' and 'Don't Save Settings' are present.
- INTERNET CONNECTION TYPE:** A dropdown menu set to 'Russia PPPoE (Dual Access)'. Text: 'Choose the mode to be used by the router to connect to the Internet.'
- RUSSIA PPPOE (DUAL ACCESS):** Fields for 'Address Mode' (Dynamic IP selected), 'IP Address' (0.0.0.0), 'User Name' (Логин на Интернет), 'Password' (Пароль на Интернет), 'Verify Password' (Пароль на Интернет), 'Service Name' (optional), 'Reconnect Mode' (Always on selected), 'Maximum Idle Time' (5 minutes), 'MTU' (1472 bytes), and 'MAC Address' (48:5B:39:5F:0E:CA). A 'Clone Your PC's MAC Address' button is also present.
- WAN PHYSICAL SETTING:** Fields for 'Address Mode' (Static IP selected), 'IP Address' (Локальный IP), 'Subnet Mask' (Маска подсети), 'Gateway' (Шлюз), 'Primary DNS Address' (212.1.224.6), and 'Secondary DNS Address' (212.1.244.6).

Red annotations highlight the 'Dynamic IP' and 'Always on' radio buttons in the PPPoE section, and the 'Static IP' radio button and the IP Address, Subnet Mask, and Gateway fields in the Physical Setting section. A red circle around the Physical Setting fields is annotated with 'Данные уточните в ТП провайдера (980-24-00)'. The bottom left corner of the page shows the 'WIRELESS' logo.

Настройка PPTP (VPN) при автоматическом получении локального IP адреса (DHCP).

В поле **My Internet Connection is:** выберите **Russia PPTP Dual Access**.

1. Address Mode - Dynamic IP.
2. **PPTP Server IP Address** – ppp.lan .
3. **Username** – имя пользователя для авторизации в сети провайдера.
4. **Password** – пароль для авторизации в сети провайдера.
5. **Verify Password** – повторите пароль для авторизации в сети провайдера.
6. Значение **MTU** – **1372**.
7. Нажмите кнопку **Clone Your PC's MAC Address**.
8. **Reconnect Mode** - режим установки соединения. Выберите "Always on" для постоянного подключения.
9. Сохраняете настройки нажатием клавиши **Save Settings**.

DIR-615	SETUP	ADVANCED	TOOLS	STATUS	SUPPORT
INTERNET	WAN				Helpful Hints... When configuring the router to access the Internet, be sure to choose the correct Internet Connection Type from the drop down menu. If you are unsure of which option to choose, contact your Internet Service Provider (ISP) . If you are having trouble accessing the Internet through the router, double check any settings you have entered on this page and verify them with your ISP if needed. More...
WIRELESS SETTINGS	Use this section to configure your Internet Connection type. There are several connection types to choose from: Static IP, DHCP, PPPoE, PPTP and L2TP. If you are unsure of your connection method, please contact your Internet Service Provider. Note: If using the PPPoE option, you will need to remove or disable any PPPoE client software on your computers. <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/>				
NETWORK SETTINGS	INTERNET CONNECTION TYPE Choose the mode to be used by the router to connect to the Internet. My Internet Connection is : <input type="text" value="Russia PPTP (Dual Access)"/> ←				
RUSSIA PPTP (DUAL ACCESS) INTERNET CONNECTION TYPE : Enter the information provided by your Internet Service Provider (ISP). Address Mode : <input checked="" type="radio"/> Dynamic IP <input type="radio"/> Static IP PPTP IP Address : <input type="text" value="0.0.0.0"/> PPTP Subnet Mask : <input type="text" value="0.0.0.0"/> PPTP Gateway IP Address : <input type="text" value="0.0.0.0"/> PPTP Server IP Address : <input type="text" value="ppp.lan"/> Username : <input type="text" value="Логин на Интернет"/> Password : <input type="text" value="Пароль на Интернет"/> Verify Password : <input type="text" value="Пароль на Интернет"/> Reconnect Mode : <input checked="" type="radio"/> Always on <input type="radio"/> On demand <input type="radio"/> Manual Maximum Idle Time : <input type="text" value="5"/> (minutes, 0=infinite) Primary DNS Address : <input type="text" value="0.0.0.0"/> Secondary DNS Address : <input type="text" value="0.0.0.0"/> MTU : <input type="text" value="1372"/> (bytes)MTU default = 1400 MAC Address : <input type="text" value="48:5B:39:5F:C8:0A"/> <input type="button" value="Clone Your PC's MAC Address"/> ←					

Настройка PPTP (VPN) при статическом локальном IP адресе.

В поле **My Internet Connection is:** выберите **Russia PPTP Dual Access.**

1. **Address Mode** – Static IP (значения **Вы можете уточнить в тех. поддержке провайдера по телефону 980-24-00, круглосуточно). Введите:**

- 1) **IP Address** - IP Address выданный вам провайдером.
 - 2) **Subnet Mask** – маска подсети.
 - 3) **Gateway** – шлюз.
 - 4) **Primary DNS Address** – предпочитаемый DNS Server провайдера (**212.1.224.6**).
 - 5) **Secondary DNS Address** – альтернативный DNS server провайдера (**212.1.244.6**).
- Сохраняете настройки нажатием кнопки **Save Settings**.

2. **PPTP Server IP Address** – ppp.lan .

3. **Username** – имя пользователя для авторизации в сети провайдера.

4. **Password** – пароль для авторизации в сети провайдера.

5. **Verify Password** – повторите пароль для авторизации в сети провайдера.

6. Значение **MTU** – **1372**.

7. Нажмите кнопку **Clone Your PC's MAC Address**.

8. **Reconnect Mode** - режим установки соединения. Выберите "Always on" для постоянного подключения.

9. Сохраняете настройки нажатием клавиши **Save Settings**.

DIR-615	SETUP	ADVANCED	TOOLS	STATUS	SUPPORT
INTERNET	WAN Use this section to configure your Internet Connection type. There are several connection types to choose from: Static IP, DHCP, PPPoE, PPTP and L2TP. If you are unsure of your connection method, please contact your Internet Service Provider. Note: If using the PPPoE option, you will need to remove or disable any PPPoE client software on your computers. <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/>				Helpful Hints... When configuring the router to access the Internet, be sure to choose the correct Internet Connection Type from the drop down menu. If you are unsure of which option to choose, contact your Internet Service Provider (ISP) . If you are having trouble accessing the Internet through the router, double check any settings you have entered on this page and verify them with your ISP if needed. More...
WIRELESS SETTINGS	INTERNET CONNECTION TYPE Choose the mode to be used by the router to connect to the Internet. My Internet Connection is : <input type="text" value="Russia PPTP (Dual Access)"/>				
NETWORK SETTINGS	RUSSIA PPTP (DUAL ACCESS) INTERNET CONNECTION TYPE : Enter the information provided by your Internet Service Provider (ISP). Address Mode : <input type="radio"/> Dynamic IP <input checked="" type="radio"/> Static IP PPTP IP Address : <input type="text" value="IP адрес"/> PPTP Subnet Mask : <input type="text" value="Маска подсети"/> PPTP Gateway IP Address : <input type="text" value="Шлюз"/> PPTP Server IP Address : <input type="text" value="ppp.lan"/> Username : <input type="text" value="Логин на Интернет"/> Password : <input type="text" value="Пароль на Интернет"/> Verify Password : <input type="text" value="Пароль на Интернет"/> Reconnect Mode : <input checked="" type="radio"/> Always on <input type="radio"/> On demand <input type="radio"/> Manual Maximum Idle Time : <input type="text" value="5"/> (minutes, 0=infinite) Primary DNS Address : <input type="text" value="212.1.224.6"/> Secondary DNS Address : <input type="text" value="212.1.244.6"/> MTU : <input type="text" value="1372"/> (bytes)MTU default = 1400 MAC Address : <input type="text" value="48:5B:39:5F:C:CA"/> <input type="button" value="Clone Your PC's MAC Address"/>				

NAT при автоматическом получении IP адреса (DHCP).

В поле **My Internet Connection is:** из списка выберите **Dynamic IP**.

1. Нажимаете кнопку **Clone MAC Address**.
2. Сохраняете настройки нажатием клавиши **Save Settings**.

DIR-615	SETUP	ADVANCED	TOOLS	STATUS	SUPPORT
INTERNET	WAN				Helpful Hints... When configuring the router to access the Internet, be sure to choose the correct Internet Connection Type from the drop down menu. If you are unsure of which option to choose, contact your Internet Service Provider (ISP) . If you are having trouble accessing the Internet through the router, double check any settings you have entered on this page and verify them with your ISP if needed. Note: When DNS Relay is enabled along with Advanced DNS feature, your workstations on the network that are obtaining an IP address from router's DHCP server will obtain 192.168.0.1 (router's IP address). However, traffic will still be protected. Although Advanced DNS feature is enabled, DNS IP address of your workstation can still be modified to the DNS server IP you desire. Please note that the router does not dictate the DNS name resolution when DNS IP address is configured on the workstation.
WIRELESS SETTINGS	Use this section to configure your Internet Connection type. There are several connection types to choose from: Static IP, DHCP, PPPoE, PPTP and L2TP. If you are unsure of your connection method, please contact your Internet Service Provider. Note: If using the PPPoE option, you will need to remove or disable any PPPoE client software on your computers. <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/>				
NETWORK SETTINGS	INTERNET CONNECTION TYPE Choose the mode to be used by the router to connect to the Internet. My Internet Connection is : <input type="text" value="Dynamic IP (DHCP)"/> 				
	ADVANCED DNS SERVICE Advanced DNS is a free security option that provides Anti-Phishing to protect your Internet connection from fraud and navigation improvements such as auto-correction of common URL typos. Enable Advanced DNS Service : <input type="checkbox"/>				
	DYNAMIC IP (DHCP) INTERNET CONNECTION TYPE : Use this Internet connection type if your Internet Service Provider (ISP) didn't provide you with IP Address information and/or a username and password. Host Name : <input type="text" value="DIR-615"/> Use Unicasting : <input checked="" type="checkbox"/> (compatibility for some DHCP Servers) Primary DNS Address : <input type="text" value="0.0.0.0"/> Secondary DNS Address : <input type="text" value="0.0.0.0"/> MTU : <input type="text" value="1500"/> (bytes)MTU default = 1500 MAC Address : <input type="text" value="48:5B:39:5F:C8:CA"/> <input type="button" value="Clone Your PC's MAC Address"/> 				

Проверка статуса подключения к Интернет.

Проверить статус подключения можно открыв вкладку **STATUS**, меню **Device Info**.

D-Link

DIR-615 // SETUP ADVANCED TOOLS **STATUS** SUPPORT

DEVICE INFO

DEVICE INFORMATION

All of your Internet and network connection details are displayed on this page. The firmware version is also displayed here.

GENERAL

Time : 6 Май 2010 г. 16:44:57
Firmware Version : 5.10RU, Thu, 06 May 2010

Helpful Hints...
All of your WAN and LAN connection details are displayed here.
[More...](#)

PPPoE:

WAN

Connection Type : Russia PPPoE
Cable Status : Connected
Network Status : Connected
Connection Up Time : 0 Day, 0:00:52

MAC Address : 48:5B:39:5F:CB:CA
IP Address : 46.73.240.17
Subnet Mask : 255.255.255.255
Default Gateway : 212.1.254.109
Primary DNS Server : 212.1.224.6
Secondary DNS Server : 212.1.244.6
Advanced DNS : Disabled

VPN:

WAN

Connection Type : Russia PPTP
Cable Status : Connected
Network Status : Connected
Connection Up Time : 0 Day, 0:01:21

MAC Address : 48:5B:39:5F:CB:CA
IP Address : 79.111.88.185
Subnet Mask : 255.255.255.255
Default Gateway : 212.1.254.37
Primary DNS Server : 212.1.224.6
Secondary DNS Server : 212.1.244.6
Advanced DNS : Disabled

NAT:

WAN

Connection Type : DHCP Client
Cable Status : Connected
Network Status : Connected
Connection Up Time : 0 Day, 0:00:51

MAC Address : 48:5B:39:5F:CB:CA
IP Address : 10.9.32.142
Subnet Mask : 255.255.255.192
Default Gateway : 10.9.22.129
Primary DNS Server : 212.1.224.6
Secondary DNS Server : 212.1.244.6
Advanced DNS : Disabled

Сохранение/восстановление настроек роутера.

После проведения настройки, рекомендуется сохранить их, чтобы в случае возникновения проблем, можно было их восстановить. Для этого необходимо зайти во вкладку **TOOLS**, меню **SYSTEM**.

- Для сохранения текущих настроек роутера необходимо нажать кнопку **Save Configuration**. Файл с настройками будет сохранен в указанное место на жёстком диске.

- Для восстановления настроек из файла, необходимо нажать кнопку **Обзор**, указать путь к файлу с настройками, затем нажать кнопку **Restore Configuration Defaults**.

Внимание! Нажатие кнопку **Restore Device** приведет к восстановлению заводских настроек!

Для перезагрузки роутера необходимо нажать кнопку **Reboot the Device**.

The screenshot shows the D-Link DIR-615 web interface. At the top, it displays 'Product Page: DIR-615', 'Hardware Version: E4', and 'Firmware Version: 5.10RU'. The D-Link logo is prominently displayed. Below the logo is a navigation bar with tabs for 'DIR-615', 'SETUP', 'ADVANCED', 'TOOLS', 'STATUS', and 'SUPPORT'. The 'TOOLS' tab is selected. On the left side, there is a vertical menu with options: ADMIN, TIME, SYSLOG, EMAIL SETTINGS, SYSTEM (highlighted), FIRMWARE, DYNAMIC DNS, SYSTEM CHECK, and SCHEDULES. The main content area is titled 'SYSTEM SETTINGS' and contains the following text: 'The System Settings section allows you to reboot the device, or restore the router to the factory default settings. Restoring the unit to the factory default settings will erase all settings, including any rules that you have created.' and 'The current system settings can be saved as a file onto the local hard drive. The saved file or any other saved setting file created by device can be uploaded into the unit.' Below this text are four sections with buttons: 'Save Settings To Local Hard Drive:' with a 'Save Configuration' button; 'Load Settings From Local Hard Drive:' with a text input field, an 'Обзор...' button, and a 'Restore Configuration from File' button; 'Restore To Factory Default Settings:' with a 'Restore Factory Defaults' button and the text 'Restore all Settings to the Factory Defaults'; and 'Reboot the Device:' with a 'Reboot the Device' button. On the right side, there is a 'Helpful Hints...' section with text: 'Once your router is configured the way you want it, you can save the configuration settings to a configuration file. You might need this file so that you can load your configuration later in the event that the router's default settings are restored. To save the configuration, click the Save Configuration button. More...'